

Stealth Gear®

Manual & safety instructions One Man Chair Hide

Delivery includes:

- One Man Chair Hide
- Carrying bag
- Metal pegs
- Storage bag

Safety first:

- The One Man Chair Hide is a single-person hide, so never use it with more than one person!
- Weight limit of the chair: 265 lbs, 120 kg.
- Secure the tent properly with the supplied pegs and guy ropes in bad weather conditions.
- Ventilate the tent sufficiently through the windows and door.
- Please ensure that you do not place the tent under trees where branches may fall or trees themselves may fall over.
- Do not use the hide during a storm or thunderstorm.
- Do not use fire in or around the hide, do not smoke.
- Do not take any risks with fire, especially in dry natural surroundings or during drought conditions.
- Do not use this product if you are under the influence of alcohol, drugs or medication.
- Benel B.V. / Buteo Photo Gear accepts no responsibility for accident or injury caused by improper use of this product, failure to comply with the instructions provided in this manual, or modifications made to this wildlife photography hide.

Getting started with the One Man Chair Hide:

1. Removing the tent from its cover:

For safety reasons, make sure you have enough space around you before you start.

- Open the cover, then carefully remove the tent from the cover.
Warning: The hide contains spring steel under tension. Use caution when unfolding it.
- Release the strap and buckle on the front of the chair blind. Unfold the chair to the sitting position.
- Take the three spring steel bands inside the hide and pull them forward. You may have to compress the chair together to allow for the blind to be folded forward.
- Lift the tent up above the rear back seat rest. Using the slid lock, position the slid lock over both the steel bands to secure the bands together (photos 1-4). Secure both sides of the rear back seat rest.



Photos 1, 2, 3 and 4, Using the slid lock, position the slid lock over both the steel bands to secure the bands together

- Fold the three spring steel bands forward. The Chairhide is now ready to be used.

2. Folding and storing the tent:

Remove any blind ground stakes. Follow the set-up steps 1 through 5 in reverse to tear down your chairhide. Make sure to use the strap and buckle to compress the spring steel bands before trying to fit the chair blind back into its carrying bag.

Note:

- Be sure the tent is free of debris before packing into carrying case.
- Never store a wet or damp blind in its carrying case. Make sure blind is completely dry before storing. If necessary, unpack immediately upon returning home and allow to dry, then refold and store.

Using the hide:

- 3.** Open the zip at the bottom front of the tent.
Lift the tent at the front to open it. You can then take a seat in the chair. Next, pull the tent fabric back over you. The opening of the zip can be used to insert a tripod leg. Once installed, you can close the zip again.

- 4.** A large window has been fitted at the front, consisting of two layers: camo fabric and an insect net, both covering the entire front.
Both can be detached or removed entirely using the Velcro fasteners, but can also be opened partially. The camouflage fabric has a smaller window that can be used with or without the insect net. Additional viewing windows have been added to the left, right and rear sides, which can also be closed with a zip.

- 5.** The armrest features a convenient cup holder for safely storing your bottle or mug.